

## Standard Footring Assembly

No tools are required for this assembly.

Your carton will contain:

 


foot ring



gas lift


## Before Installation:




remove the plastic spacer from inside the foot ring hub.



  make sure the outside of the gas lift cylinder column is free from grease or dirt.





make sure the plastic hub is pressed flush against the center of the foot ring into the "unlocked" position.


## During Installation:



Footring Installation: for easiest installation, slide the gas lift through the cylinder hub in the direction shown until it reaches your desired position.



Gas Lift Installation: place gas lift cylinder into base (with foot ring attached).

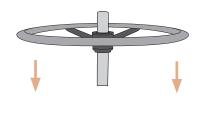

Lock footring: lock foot ring in place by pressing down on outer foot rest until hub is in "locked" position.