


Tahoe sun shade assembly

DSS1 sun shade, attached to Tahoe tables.

Parts List


A Arm assembly
2 pieces

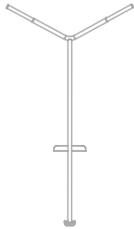

B Arm extension
4 pieces



C Canopy
1 piece

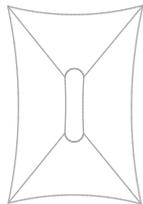

D TBEI
M8x14 screw
4 pieces



E TGS
6x30 screw
4 pieces



1 Unpack and prepare your components



Unpack your sun shade. Place pieces on a soft surface to protect the finish.

Two-person assembly is recommended.

2 Attach arm assemblies to table

Attach arm assembly to **(A)** Tahoe table using two M8x14 screws **(D)** in upper holes (underside of table), and two 6x30 screws **(E)** at base of table.

Repeat for opposite arm.

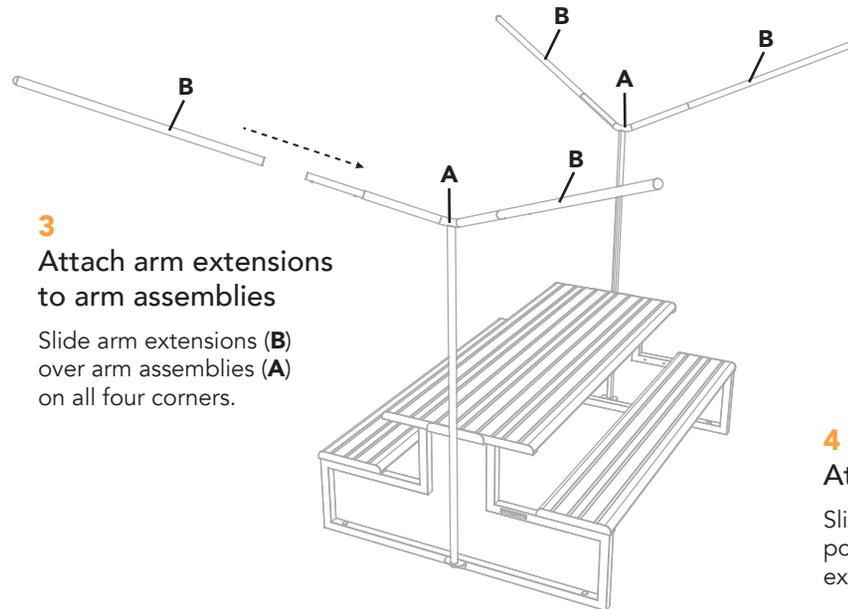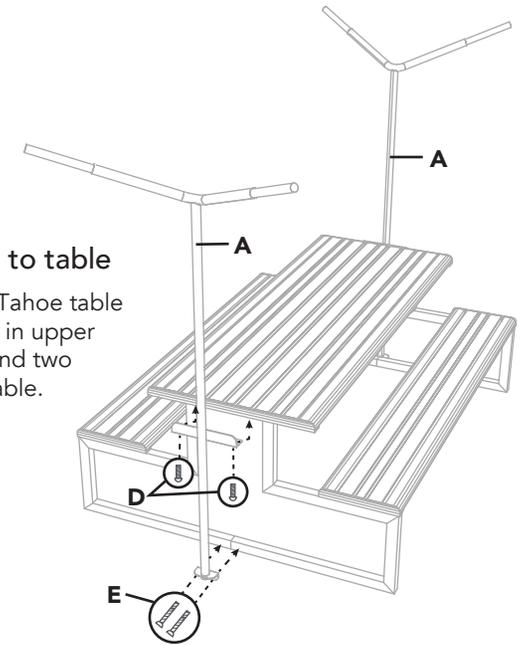

3 Attach arm extensions to arm assemblies

Slide arm extensions **(B)** over arm assemblies **(A)** on all four corners.

4 Attach canopy to arms

Slide canopy **(C)** corner pockets over ends of arm extensions.

