



Gas Lift Cylinder Removal Guide


Required Tools:



safety glasses

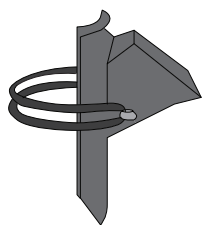

Lift-Off gas lift
removal tool

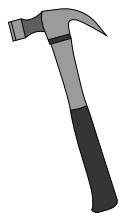


metal hammer

before removal:


- Extend chair to the highest seating position.
- Carefully turn chair over to an upside down position onto carpet or soft surface.

DO NOT REMOVE

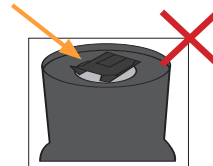


WARNING!


DO NOT remove the clip at the base of the cylinder.
Always use safety glasses.

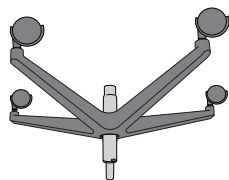


1 - Hold chair upside down by the 5-star base.

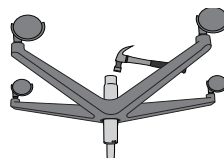


2 - With a metal hammer, give a light, but firm tap on the bottom edge of the cylinder until the chair falls out of the base.

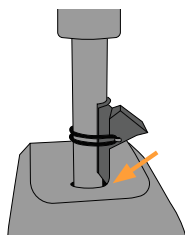

3 - Install the Lift-Off tool on the top part of the lift making sure to get it as close to the control as possible.

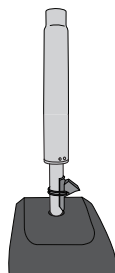

4 - Hold the chair upside down by the gas cylinder.

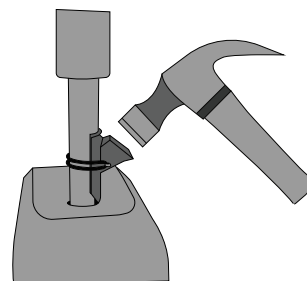

5 - With a metal hammer, give the Lift-Off tool several solid hits on the flat part of the Lift-Off tool until cylinder releases from the control.